
How to Install Vnish-Firmware.com Firmware by Vnish Toolkit


Create a folder on your PC and name it vnish-official Download the firmware to the vnish-official folder for your miner model and type of control board https://vnish-firmware.com/ from the section Method: NAND

- Open the Toolkit software .
- Click on " New ranges group " button :

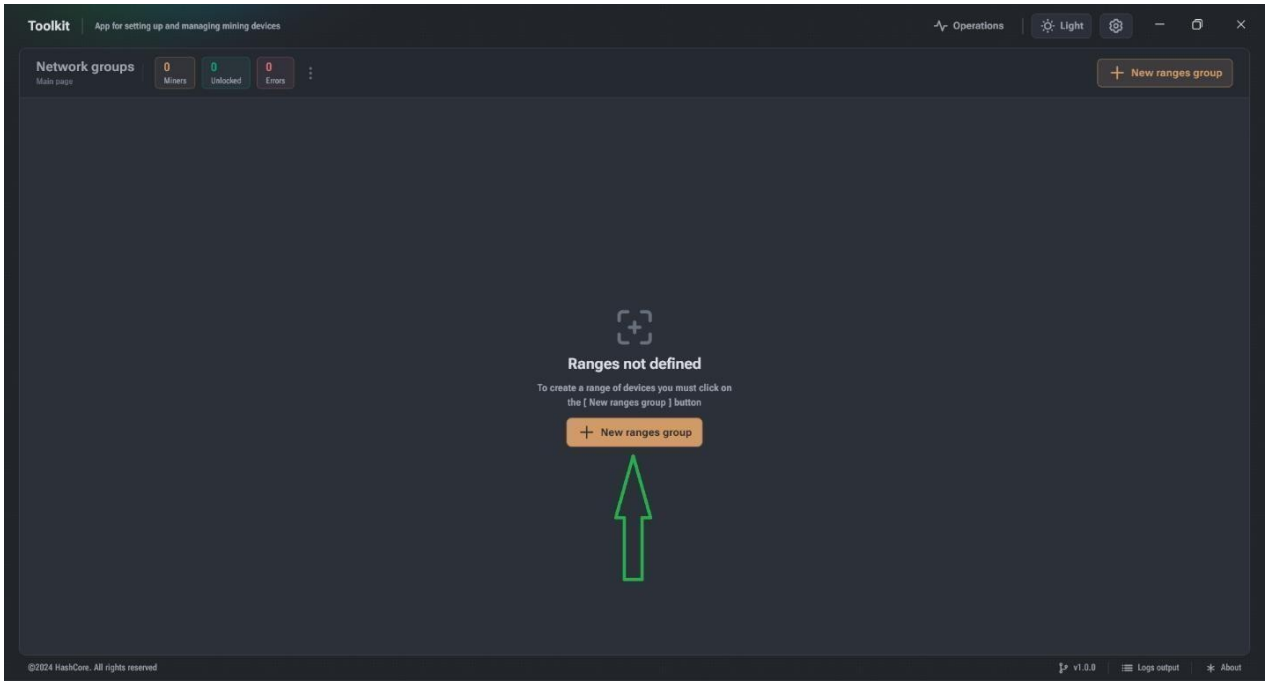


- Now need to make a group for the IP range

- Choose a name on " Group Name " box
- Put your own description on " Group description " box
- Choose your IP range on range box

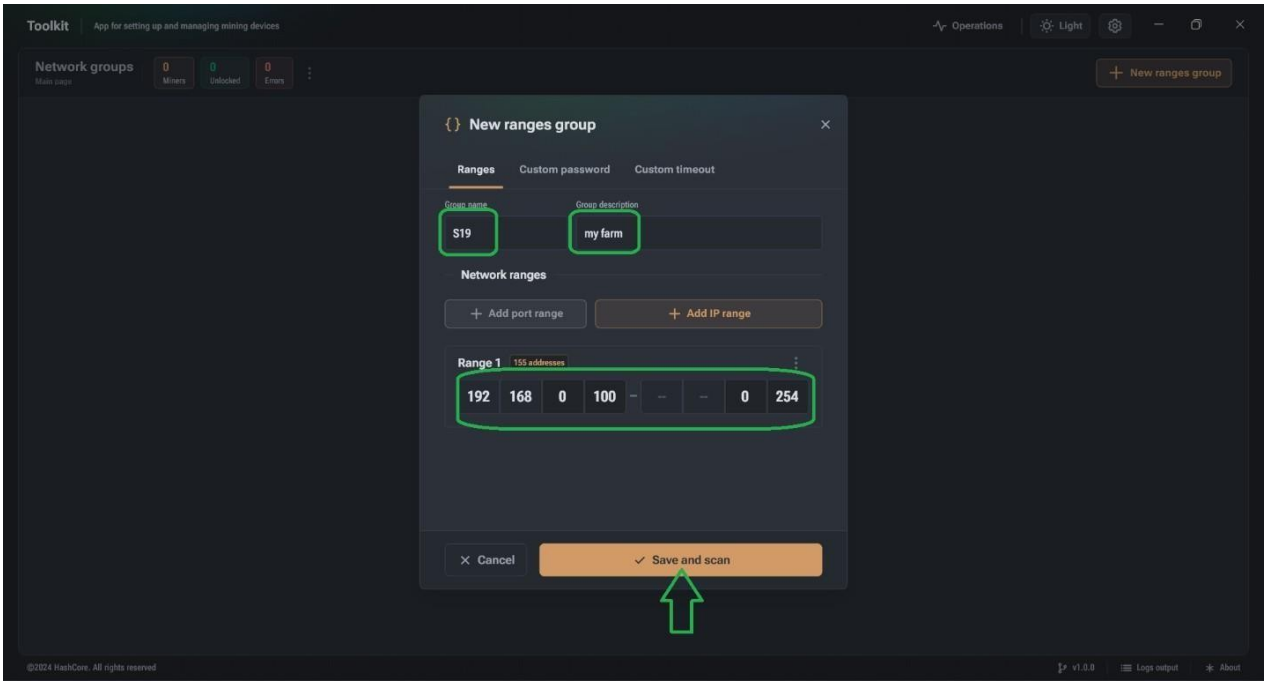


1. Additional description :


- If you changed the default password (root) , click on “ Custom password ” tab and then enable “ Custom password for unlock device ”

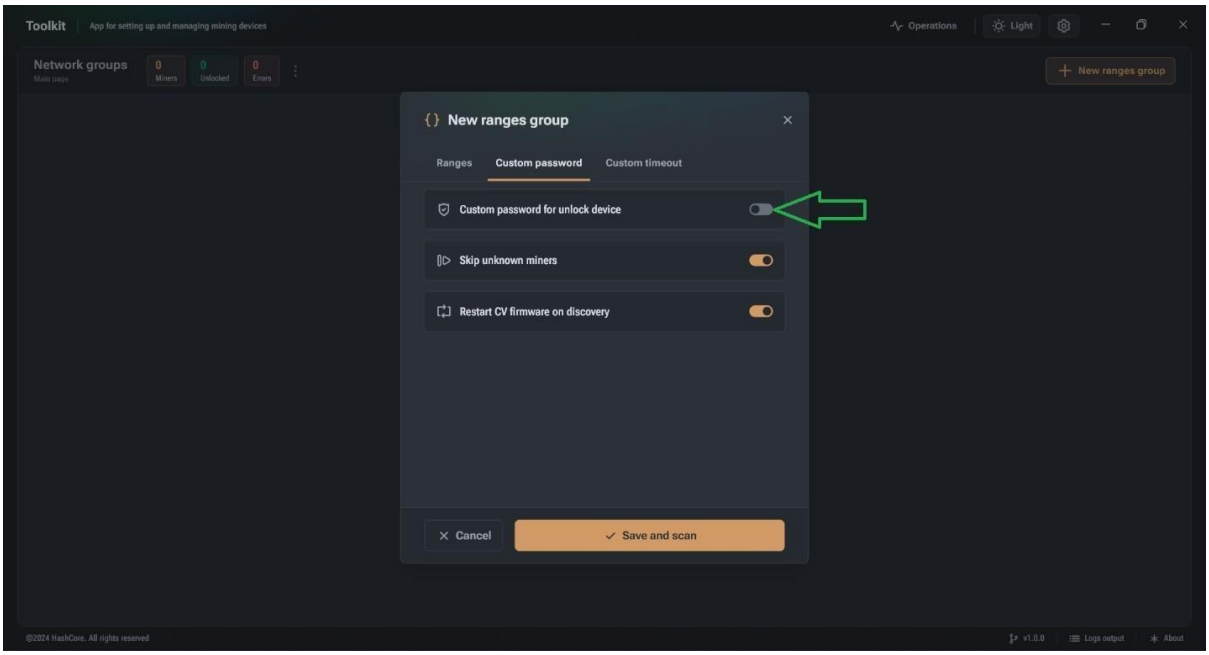


And then scroll down and enable “ Bitmain Firmware ” and click on drop down menu to see the Password . On Password box you can put your miner’s password

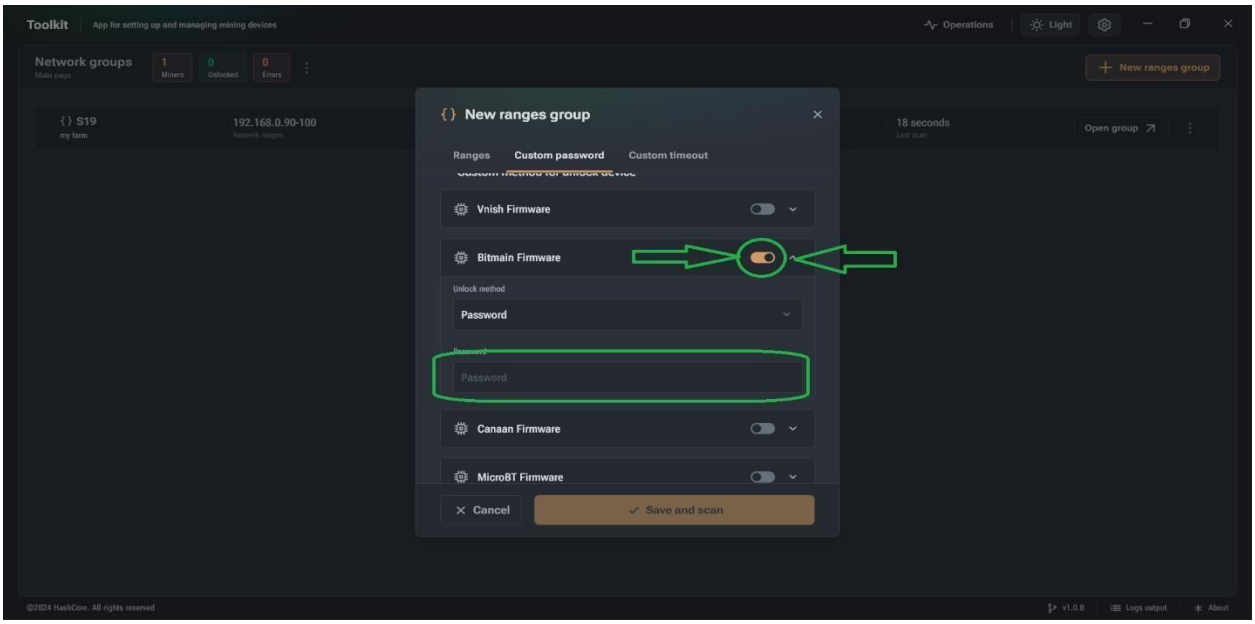


- Now Click “ Save and Scan ”
- Click on “ Open Group ”to see the miners on IP range .

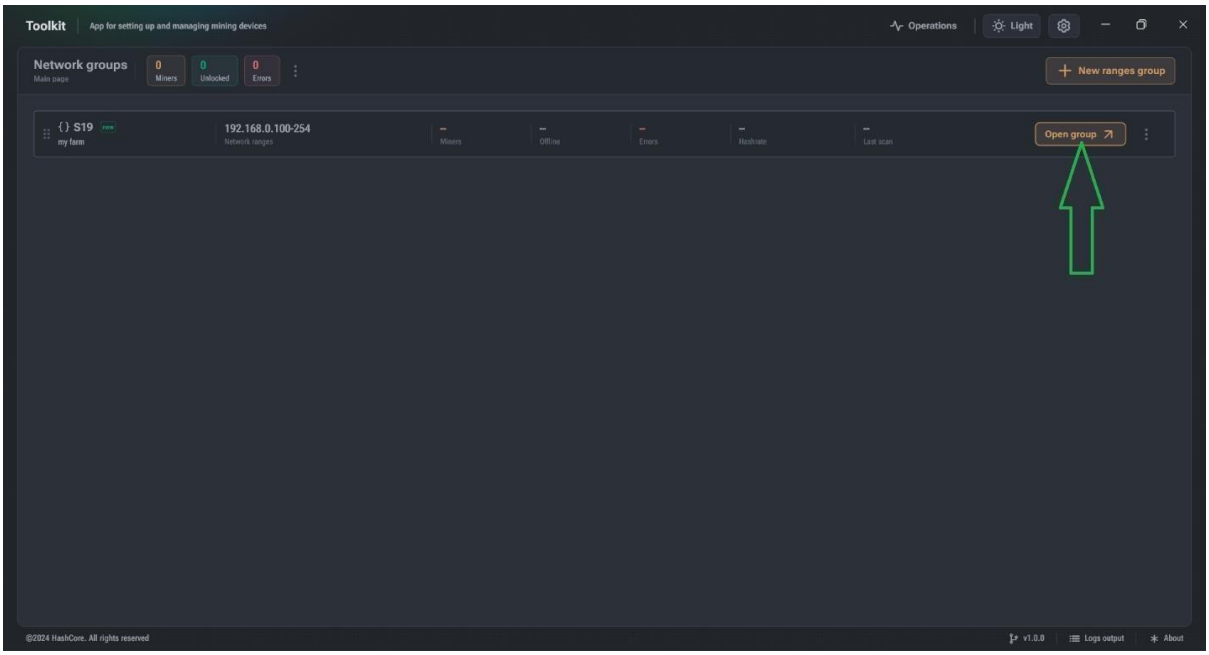

- Now select the miner you want to install Vnish firmware on it and click on “ Commands ” button :

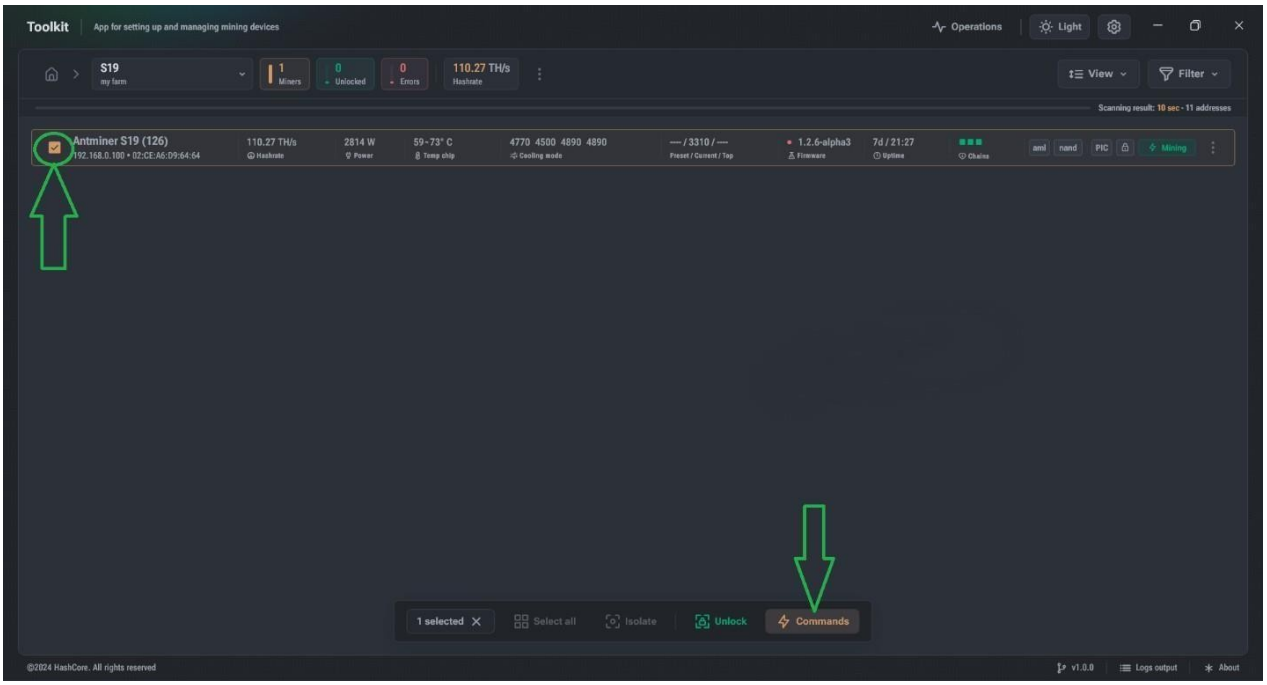


- On Commands page click on “ Install Firmware ” button :

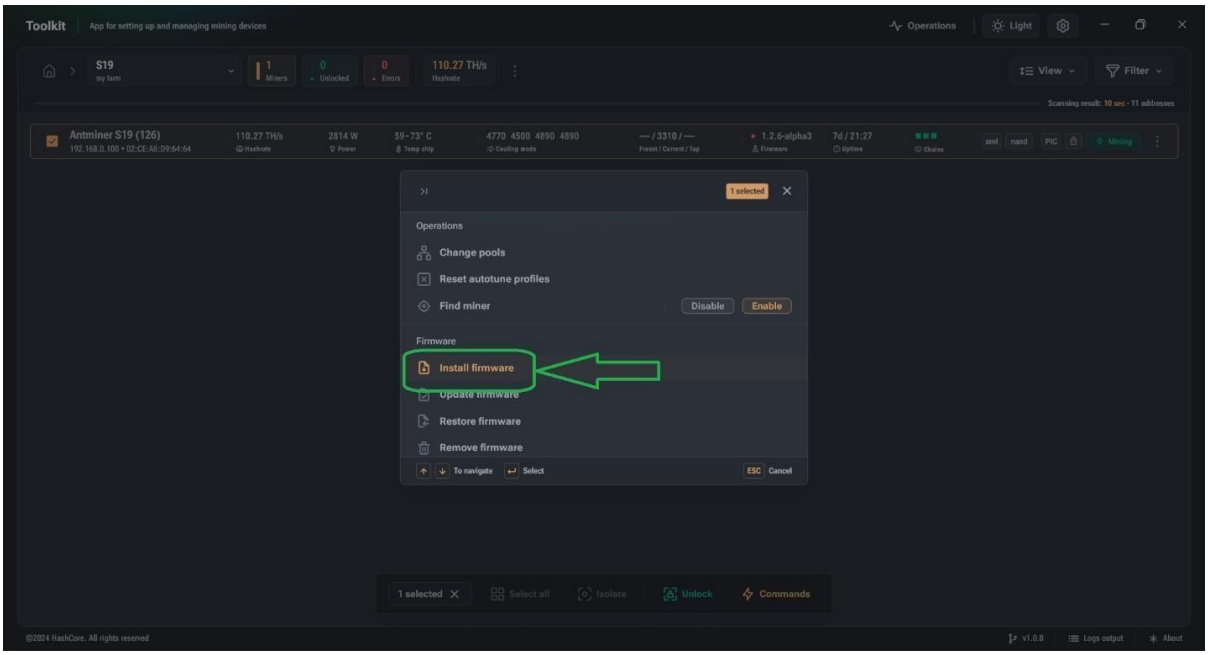


- Then the Install page appears : Click on “ Select ” button to select the **vnish-official** that firmware files are inside it fill the boxes with information like picture below :

Firmware name : **vnish-official**


Firmware Version : 1.3.6 (or newer)

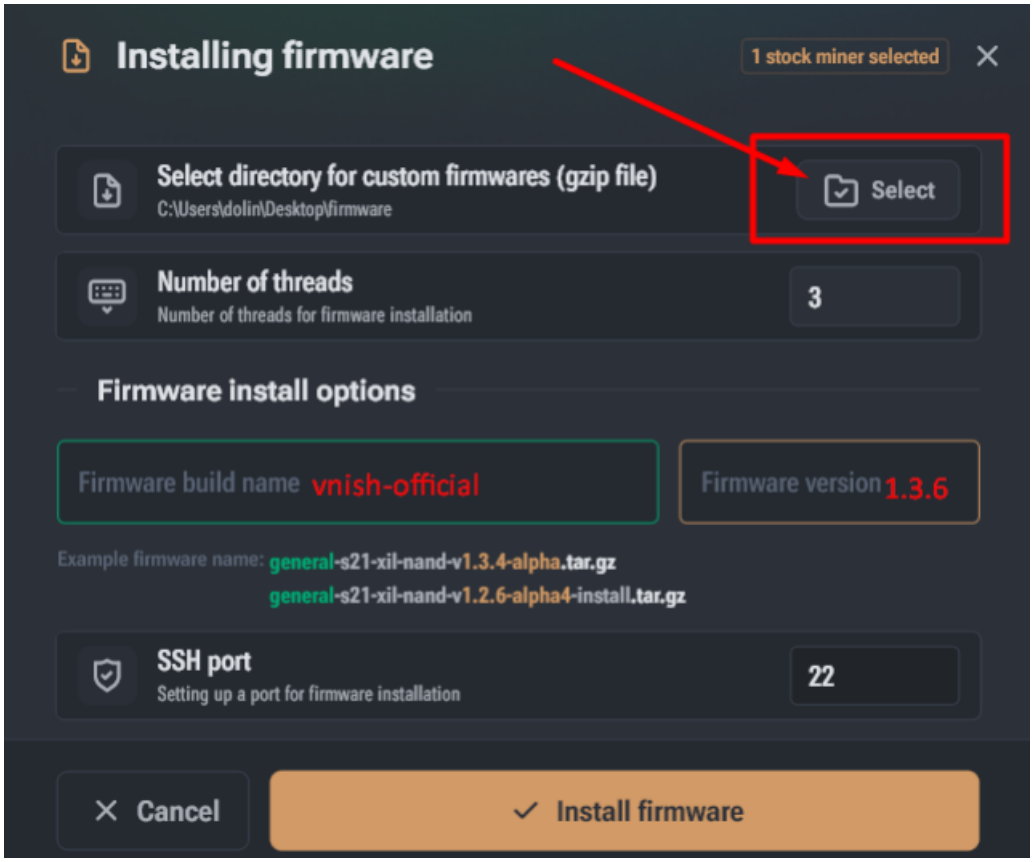

- In the "operations" section, you can view the result of the installation process, if any error was made, then the error decryption will be indicated

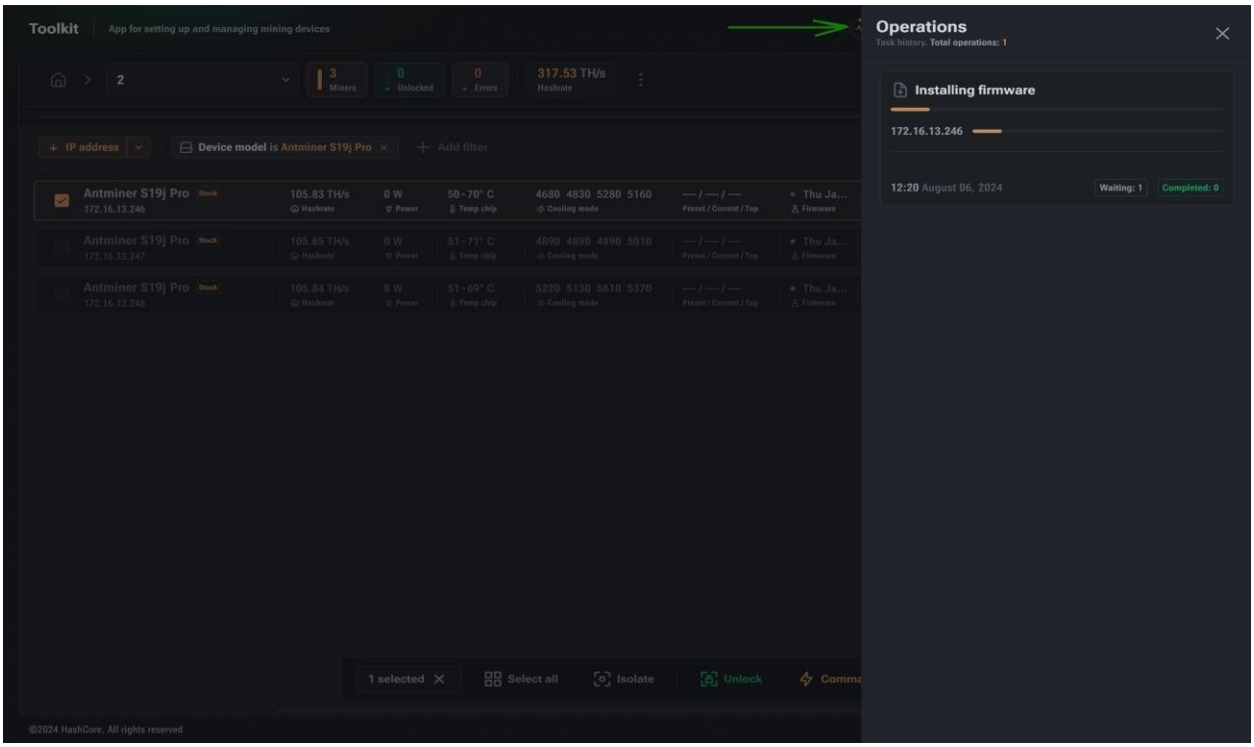

Note: if a library availability error occurs when opening the Toolkit:

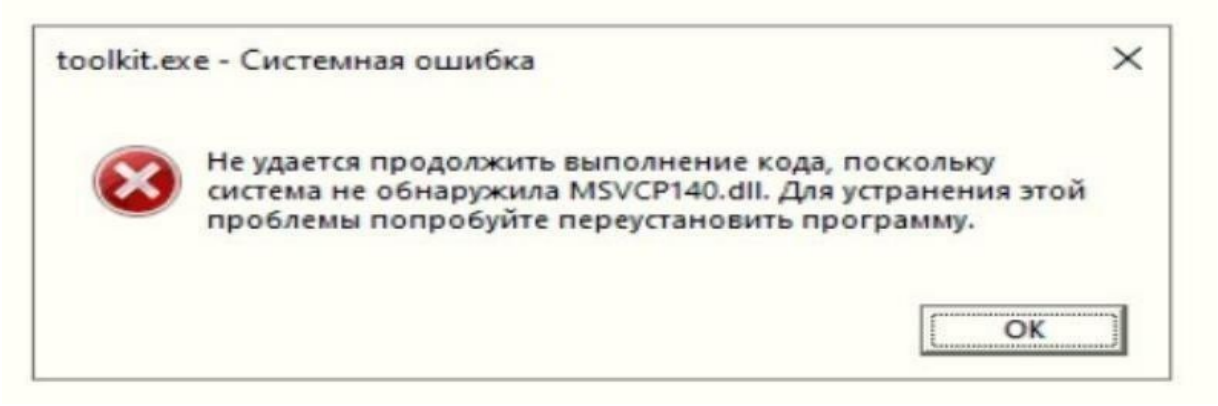

You must install the latest supported versions of the Visual C++ Redistributable component

https://www.techpowerup.com/download/visual-c-redistributable-runtime-package-all-in-one/